
SB Series Luminaire

Installation Instructions

Туре	Wattage	Input Voltage	ССТ	Beam Angle
SBDxO5H00E SBDxN5H00E SBDxH5H00E	260 W 210 W 170 W	220-240 Vac	5000 K	100°
SBDxO5600E SBDxN5600E SBDxH5600E	260 W 210 W 170 W			60°
SBDxE5A40E SBDxG5A40E SBDxJ5A40E	135 W 165 W 195 W			40 x 90° (Aisle)

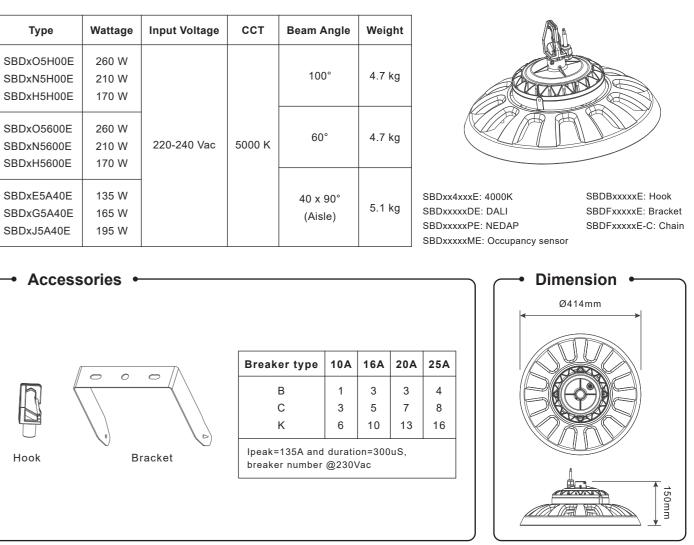

- WARNING •

- This product must be installed in accordance with applicable local, state, and national electrical codes by a licensed person familiar with the construction and operation of the product and hazards involved.
- This luminaire must be adequately grounded for protection against shock hazards and to assure proper operation.
- The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.




• The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.


Caution, risk of electric shock $/ \frac{1}{2}$



- This product is not for household use.
- The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 1.8 m is not expected.
- Terminal block is not included. Installation may require advice from a qualified person.



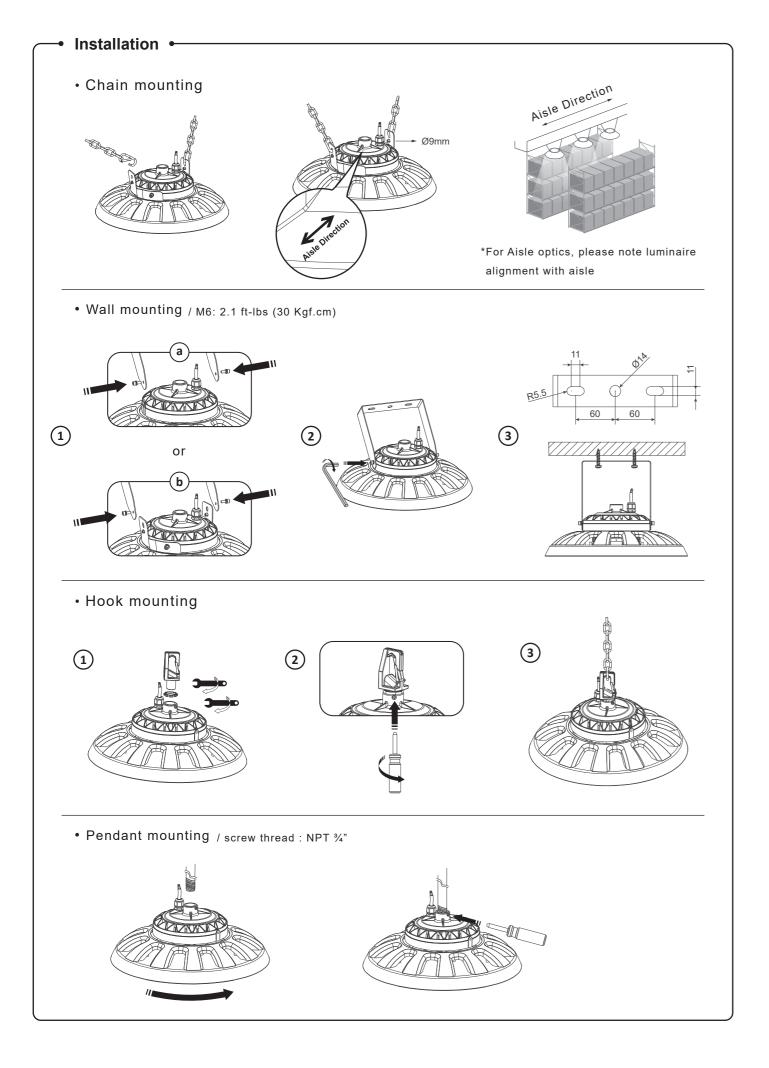

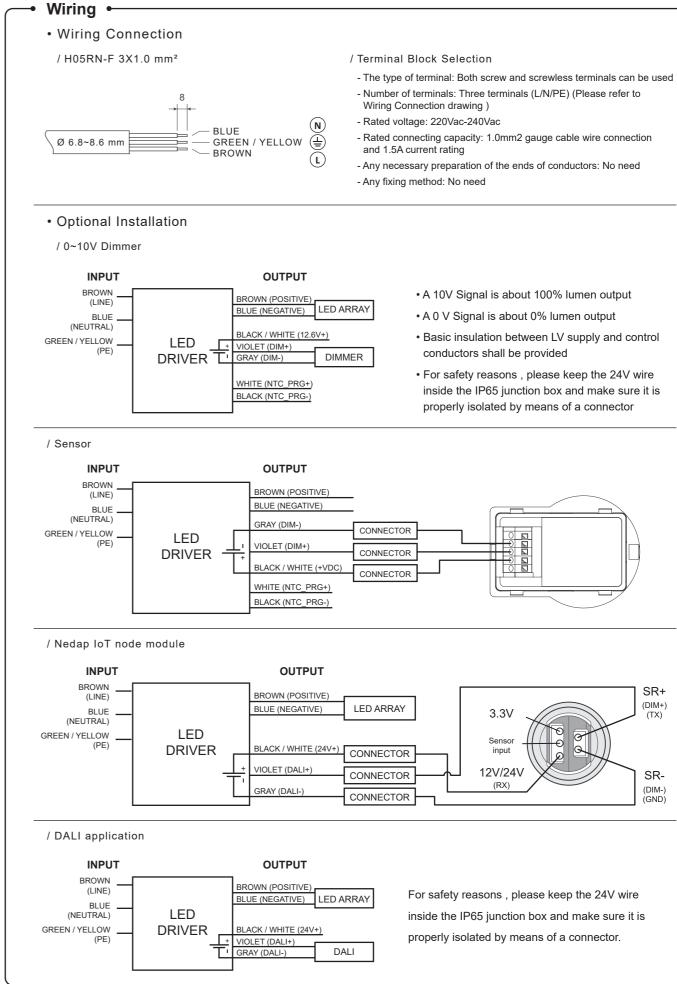

(3)

